



NK.1000

□ 3/4"=19,05mm

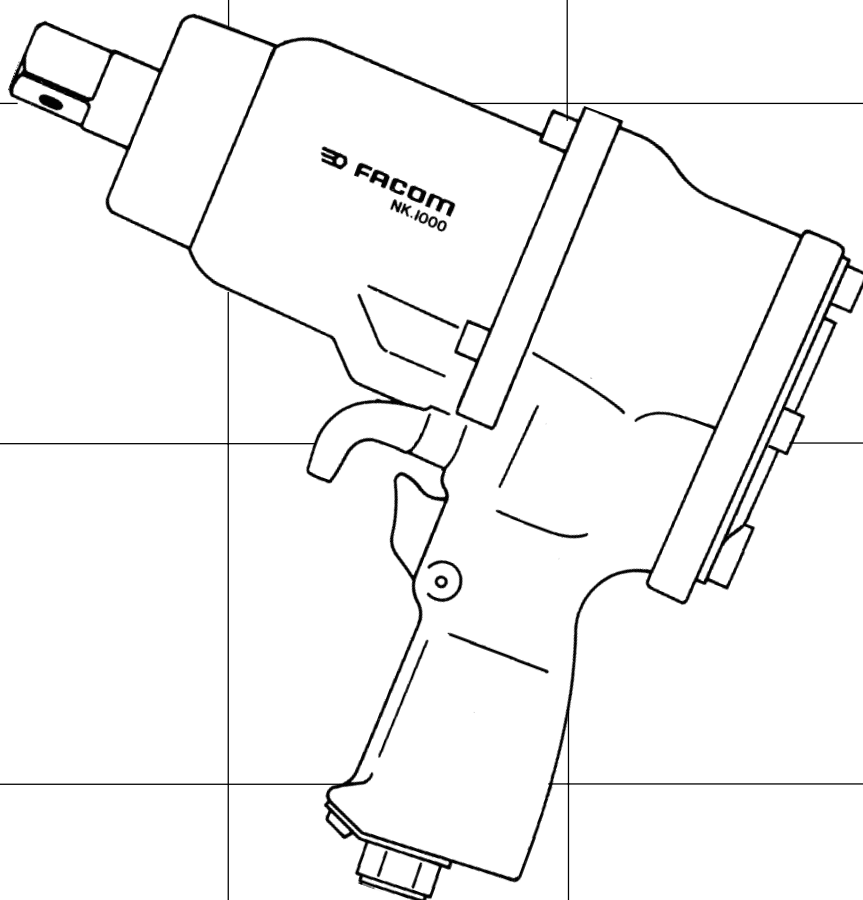


- Clé à chocs
- Impact wrench
- Schlagschrauber
- Slagmoersleutel
- Llave de impacto
- Chiave a percussione

 
Notice d'instructions
Instruction manual
Bedienungsanleitung
Gebruiksaanwijzing
Manual de instrucción
Istruzioni per l'utilizzo
NU-NK.1000/98




4,3 kg

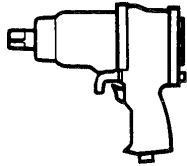


3/4"

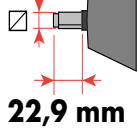


22,9 mm

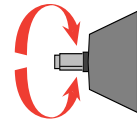

maxi 5500 t/mn

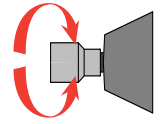


maxi 700 Nm

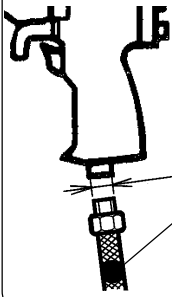


1/4 NPT
Ø 10 mm
700 l/mn
5-10 bars


3/4"

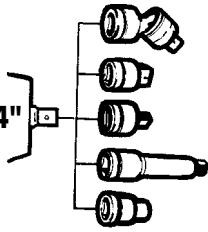


NK.240
NK.232 (3/4" --1")
NK.230 (3/4" -- 1/2")
NK.209/210/215/218
NK.17-----46
NK.3/4-----1"5/8
NK.17L-----46L
NK.3/4L-----1"5/8L
NKD.16-----22
NKB.17-----46

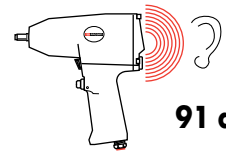


91 dB(A)

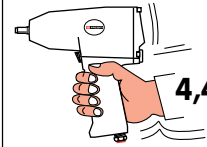

4,47 m/s²

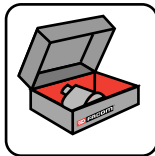



Inverseur
Reverser
Umschalter
Omkeerschakelaar
Engranaje inversor
Invertitore

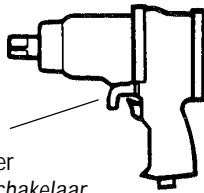


340 Nm

700 Nm

NK.1000

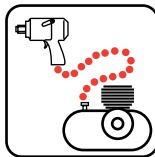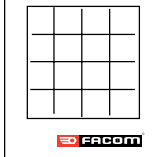

15 bar maxi/20°C
10 bar maxi/60°C
1 m³/mn mini

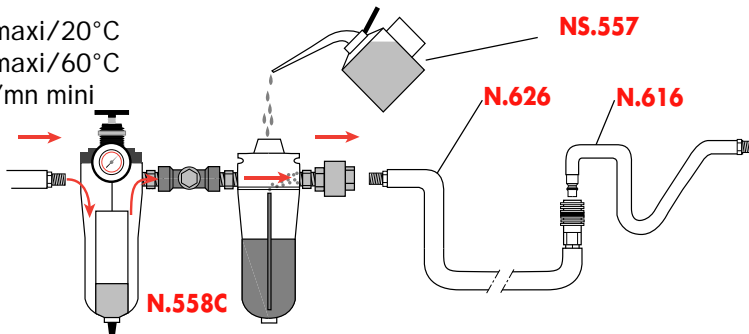


NS.557

N.626

N.616


N.558C

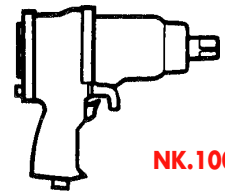

NK.1000



BA.30
BA.34
BA.36
GA.32
GA.34
GA.36

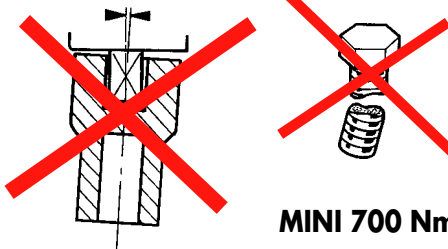

MINI 700 Nm



Porter des lunettes de sécurité
Wear eye protectors
Schutzbrille tragen
Een veiligheidsbril dragen
Utilizar gafas de seguridad
Portare gli occhiali di sicurezza



Pour garder la machine en bon état, remplacer les pièces d'usure toutes les 200 heures d'utilisation.



To keep the machine in proper working order, change wear parts after 200 hours to use.

Um die Maschine in gutem Zustand zu erhalten, Gebrauchsteile alle 200 Betriebsstunden austauschen.


Om deze machine in goede staat te houden, dienen de aan slijtage onderhevige onderdelen na 200 uren gebruik te worden verwisseld.

Para mantener la máquina en buen estado, cambiar las piezas de desgaste después de 200 horas de utilización.




Per mantenere la macchina in buono stato, cambiare le parti d'usura dopo 200 ore di funzionamento.

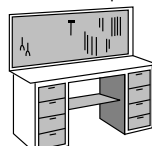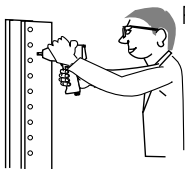

NK.1000RN1

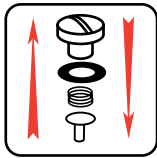


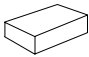
NK.1000RN1

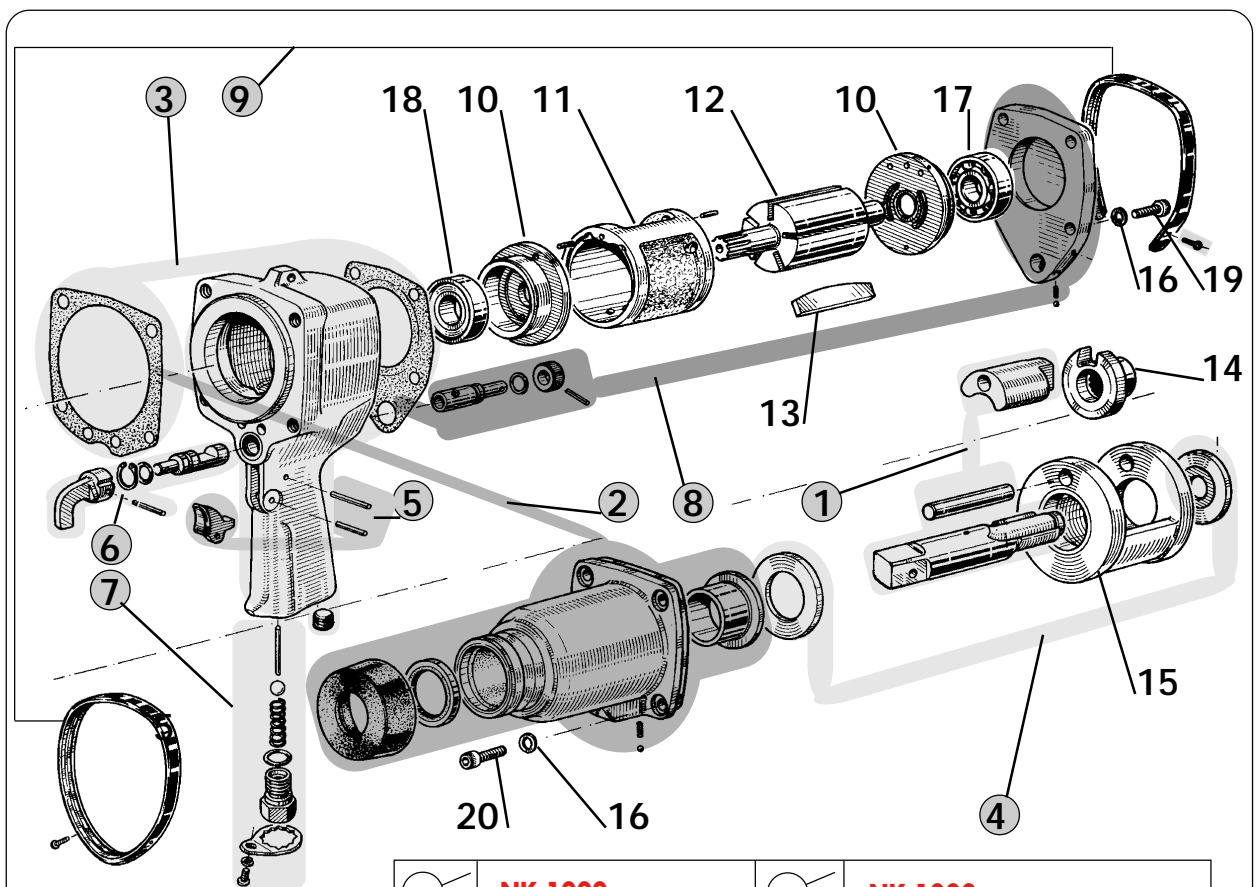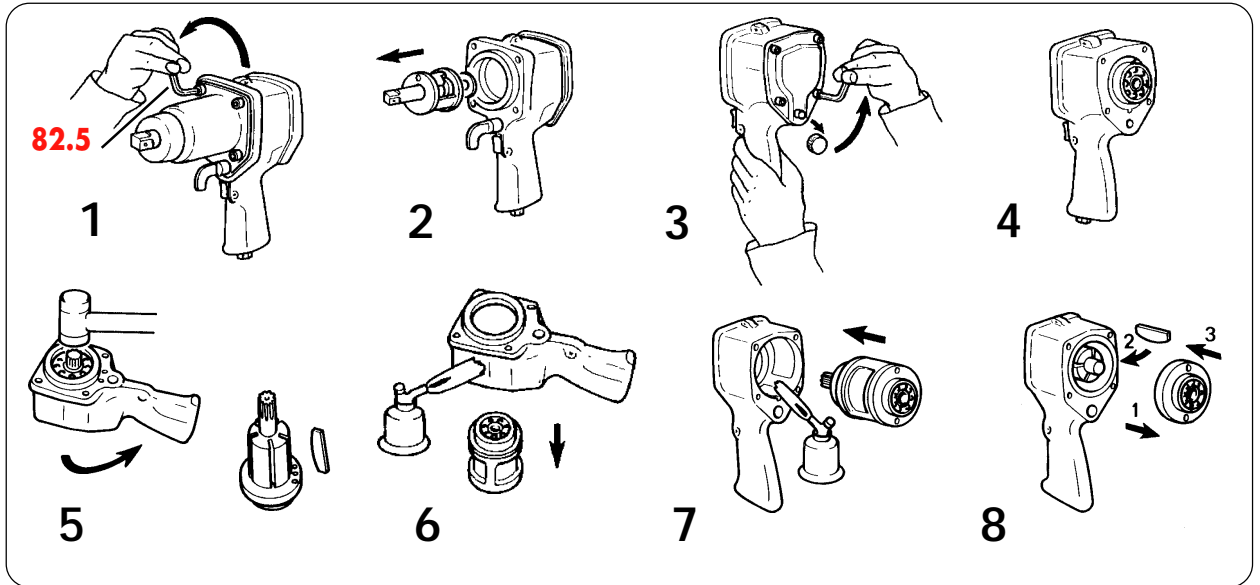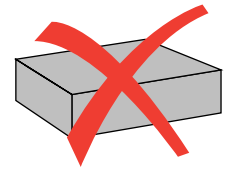

	NK.1000		NK.1000	
①	NK.1000RN1	11	NK.1000-041	
②	NK.1000SE1	12	NK.1000-044	
③	NK.1000SE2	13	NK.1000-046J5	☒
④	NK.1000SE3	14	NK.1000-054	
⑤	NK.1000SE4	15	NK.1000-055	
⑥	NK.1000SE5	16	ROND.W6	(8)
⑦	NK.1000SE6	17	ROULEMENT.6202	
⑧	NK.1000SE7	18	ROULEMENT.6202Z	
⑨	NK.1000SE8	19	VIS.CHc,M6-18	(4)
10	NK.1000-040	20	VIS.CHc,M6-20	(4)

BELGIQUE FACOM Belgique S.A/NV
LUXEMBOURG Weihoek 4
1930 Zaventem
BELGIQUE
☎ : (02) 714 09 00
Fax : (02) 721 24 11

DANMARK FACOM NORDEN A/S
FINLAND Navervej 16B
ISLAND 7451 SUNDS
NORGE DANMARK
SVERIGE ☎ : (45) 971 444 55
Fax : (45) 971 444 66

DEUTSCHLAND FACOM GmbH
Postfach 13 22 06 
42049 Wuppertal
Otto-Wells-Straße 9 
42111 Wuppertal
DEUTSCHLAND
☎ : (0202) 270 63 0
Fax : (0202) 270 63 50

ESPAÑA FACOM Herramientas SRL
PORTUGAL Poligono industrial de Vallecas
C/.Luis 1º, s/n-Nave 95 - 2ºPl.
28031 Madrid
ESPAÑA
☎ : (91) 778 21 13
Fax : (91) 778 27 53

ITALIA U.A. FACOM Italia
Via Ronchetti 3
21041 Albizzate (VA)
ITALIA
☎ : (0331) 985 811
Fax : (0331) 985 930

NEDERLAND FACOM Gereedschappen BV
Kamerlingh Onnesweg 2
Postbus 134
4130 EC Vianen
NEDERLAND
☎ : (0347) 372 334
Fax : (0347) 376 020

SINGAPORE FACOM Tools FAR EAST Pte Ltd
FAR EAST 15 Scotts Road
Thong Teck Building #08.01.02
Singapore 228218
SINGAPORE
☎ : (65) 732 0552
Fax : (65) 732 5609

SUISSE FACOM S.A./AG
ÖSTERREICH 12 route Henri-Stéphan
MAGYARORSZÁG 1762 Givisiez/Fribourg
ČESKA REP. SUISSE
☎ : (4126) 466 42 42
Fax : (4126) 466 38 54

UNITED FACOM Tools LTD
KINGDOM Bridge Wharf - Bridge Road
EIRE CHERTSEY - SURREY KT16-8LJ
UNITED KINGDOM
☎ : (01932) 566 099
Fax : (01932) 562 653

UNITED FACOM TOOLS Inc.
STATES 3535 West 47th Street
Chicago Illinois 60632
U.S.A.
☎ : (773) 523 1307
Fax : (773) 523 2103

FRANCE Société FACOM
6-8, rue Gustave Eiffel B.P.99
91423 Morangis cedex
FRANCE
☎ : 01 64 54 45 45
Fax : 01 69 09 60 93
<http://www.facom.fr>

